

**PLEASE READ THE USER GUIDE
BEFORE OPERATING TESTER**

PHONE: +27 63 378 9745

EMAIL: ajpmobilebox@gmail.com


WEB: www.petertuneup.co.za

Please download the user guide for your device from our website (link below or scan the QR code).

<https://www.petertuneup.co.za/trailertester.html>

Copy and paste the above link into your computer's or smartphone's internet browser. Click on the download user guide link for your device to start downloading; alternatively, contact us if you want it emailed to you.

- ➔ The person who is going to operate the tester must first read and go through all the pages of the user guide.
- ➔ Tester is not waterproof; keep it away from water, oil, fuel, and other liquids.
- ➔ Clean your tester with oil-based products like turpentine; never use thinners or any other alcohol-based cleaning products.
- ➔ Always use safety goggles.
- ➔ Connect the tester only after the vehicle tow-bar module has been coded and communicates with the other modules as necessary over the vehicle network.

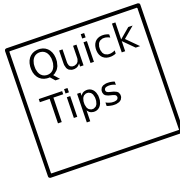

1. *To test vehicles operating with 12-volt power, use 12-volt globes on the tester.*
2. *To test vehicles operating with 24-volt power, use 24-volt globes on the tester.*
3. *There is no need to keep light circuits under load for too long. Thirty seconds per light load test is more than enough. Be careful not to burn yourself, as light bulbs will get hot!*
4. *Twelve-volt globes will blow when testing twenty-four-volt operated vehicles.*
5. *Twenty-four-volt globes will light up very dimly or not at all when testing 12-volt operated vehicles.*
6. *Make sure the cigarette lighter socket of the vehicle you're testing has power for the tester to work.*

